

CONVERSION KIT


Skyco
SKYLIGHTS

Kit Includes:

Aluminum Cap (1)

Polycarbonate Dome (1)

Tek Screws w/ EPDM
Washer

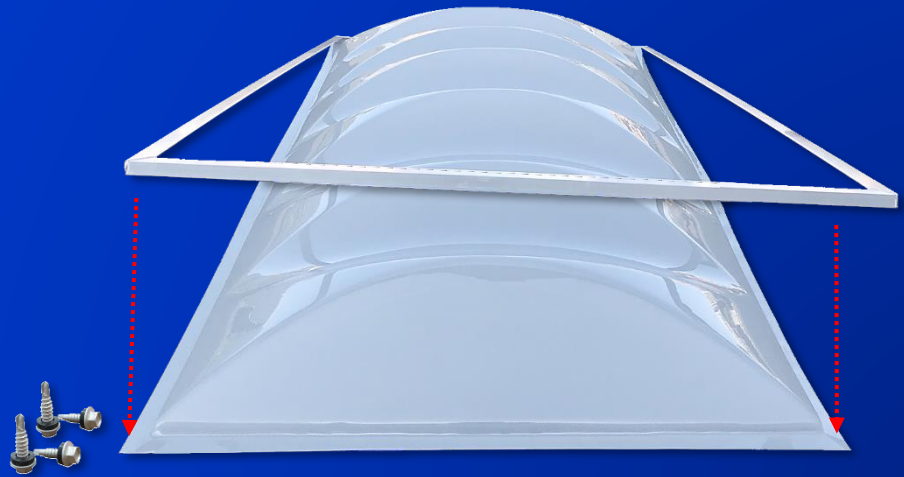

CONVERT TO A CAPPED SYSTEM

- Simple to install
- Eliminates leakage
- Eliminates cracking
- Eliminates screwing through glazing
- Eliminates UV degradation
- Cost effective option

INTEGRITY
QUALITY
INNOVATION

fast & simple
CONVERSION KIT

www.SkycoSkylights.com
info@SkycoSkylights.com

949-629-4090

Many capless skylights crack and/or leak within the first year of use.

Convert the skylight to a capped system, instead of repeating the design flaws of a capless system.



Typical result of a capless retrofit. Image shown is NOT a Skyco Skylights product.

3 EASY STEPS TO INSTALL




STEP 1

Remove the damaged dome.



STEP 2

Place our universal polycarbonate dome on the exposed frame.

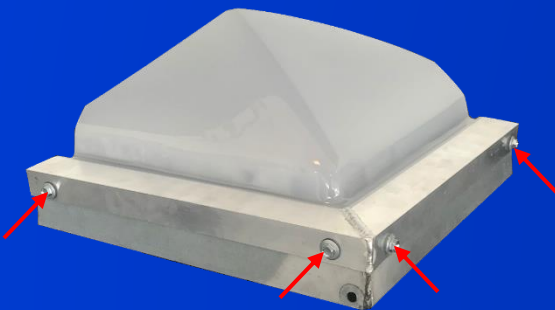

STEP 3

Install the custom aluminum cap, fastening with EPDM Washer Tek Screws